



# PERFECT SHUTTERS, inc.

The World's Largest Selection of Styles, Sizes, & Colors

[www.perfectshutters.com](http://www.perfectshutters.com)


[sales@perfectshutters.com](mailto:sales@perfectshutters.com)

## Installation Instructions Vinyl Shutter Spikes

**WATCH OUR INSTALLATION VIDEO:** <http://perfectshutters.com/product-support/installation-2/>

1. Lay the shutter face up on a clean, flat surface.
2. Measure 2 inches down from the top of the shutter and up from the bottom of the shutter and mark a spot in the center of the side rail. Mark each side rail at the center/center. **(SEE FIGURE #1)**
3. Drill a 5/16" inch diameter hole at each of the marks. **(SEE FIGURE #1)**
4. Position the shutter on the house next to the window. Using a suitable marker, mark the mounting hole locations on the building.
5. Remove the shutter and, where marked, drill a 5/16" inch diameter hole through the Wood, Vinyl or Aluminum siding only.  
**\*Do not drill into the wall\***
6. If the wall is Wood
  - Drill a 1/4" inch diameter hole, 2 1/4" deep into the wall.If the wall is Masonry or Brick
  - Drill a 1/4" inch diameter hole, 2 1/4" deep into the wall.**\*Note: A concrete anchor is not recommended when using shutter spikes\***
7. Position the shutter on the house next to the window. Place shutter spikes in each pre-drilled hole.
8. Using a hammer, gently tap in each shutter spike, until all shutter spikes are started. Then finish tapping them all in.  
**\*BE CAREFUL NOT TO TAP THEM IN TOO FAR!\***
9. Repeat this process for all remaining shutters.

**FIGURE #1**

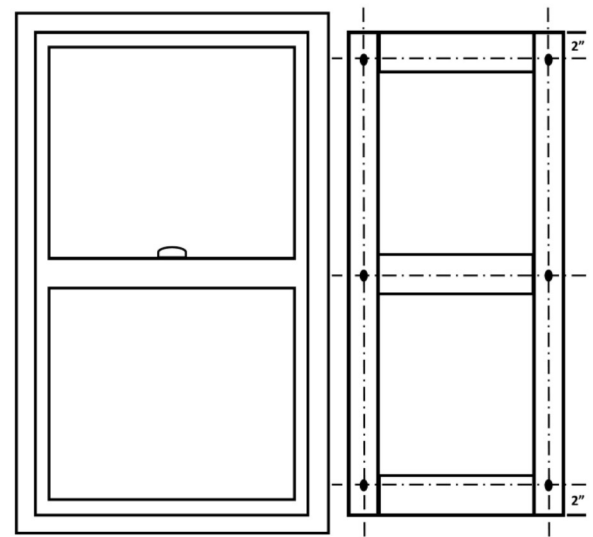

### **\* For the Warranty to Be In Force \***

The Shutter must be mounted with the shutter spikes in the positions specified in the illustration. The shutter spikes must go into the wall.

## TOOLS REQUIRED

- Power Drill
- Pencil/Marker
- Phillips Head Screw Driver
- 1/4" Drill Bit
- Tape Measure
- 5/16" Drill Bit